



Zip HydroTap Drain-less Font Accessory

Ensures safe collection of water from the HydroTap font where drainage is not available



- **Features**

- Allows HydroTap font installations in locations without immediate access to drainage
- Easy to install—simply connects in series with the USB HydroTap control lead
- Easy to use—quick release plug disconnects wiring for tank emptying
- Low voltage operation - requires no independent power supply
- Overfilling Safeguard—when container needs emptying LED flashes and tap head is rendered inoperative

Components

USB leads connects between HydroTap base unit and tap head.

Low voltage control unit with LED to indicate when tank full

One metre flexible drain hose (supplied with ZT004 HydroTap Font)

3 pin quick release connector

Single pole, double terminal float switch

Collection tank with integral float switch

For use in conjunction with ZT004 HydroTap Font and Drain

Installation

The collection tank should be located on a level base suitable for supporting its weight when full.

Good access should be provided for tank removal for emptying and subsequent replacement.

The tank must be sited within easy reach of the drain hose or extended as necessary.

The Control Unit may be sited above the worktop or inside the cupboard unit but should be located in a position where the warning LED can be easily seen.

The Control Unit USB Harness is connected in series with the flying leads from the HydroTap Base Unit and Tap Head. This provides the low voltage power for operation and no additional supply is required.


Operation

On connecting the control unit to the HydroTap Base Unit and Tap Head the system operates as normal.

When the collection tank requires emptying the level sensor is activated, the warning LED flashes and the HydroTap is rendered inoperative to safeguard against further filling of the tank.

After disconnecting the flying lead to the level sensor the collection tank can be removed and emptied.

HydroTap returns to normal operation as soon as the empty tank is repositioned and the lead reconnected.

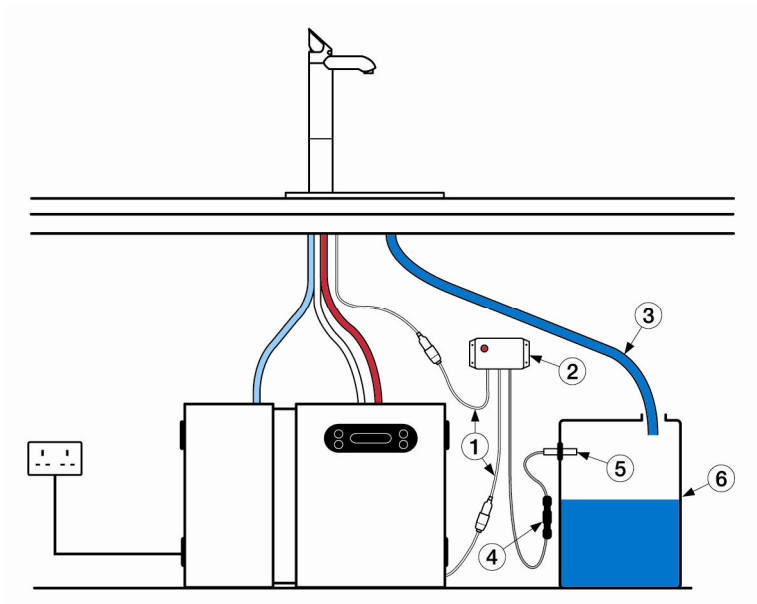

Components

1. Control unit harness plugs into USB flying leads from HydroTap base unit and Tap Head
2. Control unit LED indicates when collection tank needs emptying
3. Flexible drain hose—supplied with ZT004 HydroTap Font
4. 3 pin quick-release connector
5. Integral float valve
6. Collection tank

Product code	Voltage	Capacity litres	Weight full kg	Dimensions (mm)		
				W	D	H
ZT006	5V	-	-	113	45	85
Waste tank (incl)		9.0	9.1	295*	195	330

* Includes 100mm clearance for level sensor